


FORM #6A

97520-00-01

# 1971-ON VOLKSWAGEN INSTRUCTION SUPPLEMENT

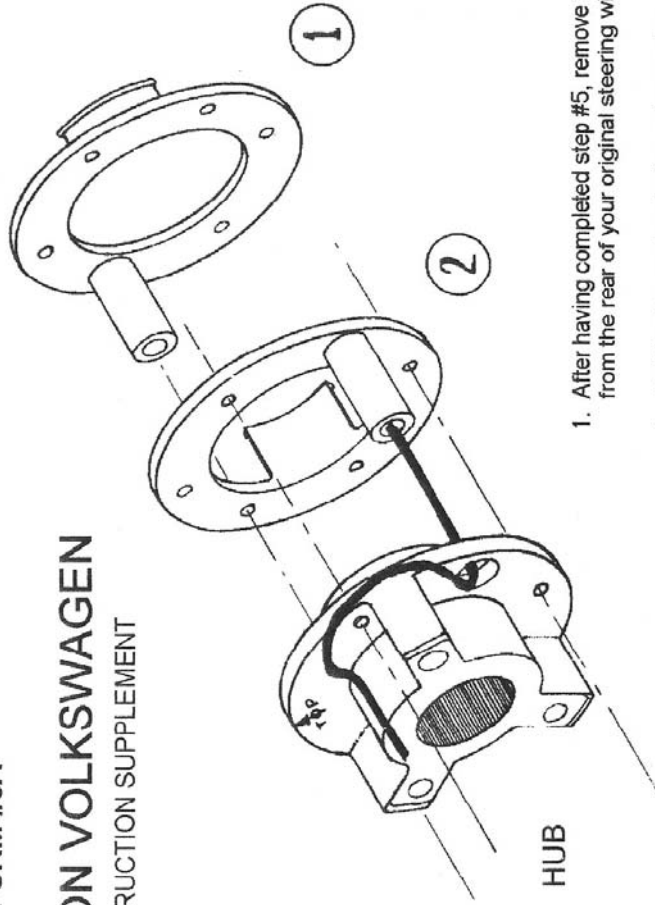

1. After having completed step #5, remove the turn signal cam from the rear of your original steering wheel.
2. Position the custom hub as shown above
3. Install the turn signal cam on the custom hub with the special screws provided in this kit.

NOTE: The original position of the turn signal cam is shown in position **1** above. The cam should be rotated 1/2 turn as shown in position **2** and then reinstalled thru custom hub.

4. Position the wire lead as shown above.
5. Continue with instruction #13.